



# UF80Fv2 ESC MANUAL

## Disclaimer

Thank you for choosing this product. Please carefully read this manual before using this product. Using this product indicates you agree with all the terms in this manual. Please strictly follow these items during usage. We'll not commit any responsibility including but not limited to indirect loss or joint responsibility caused by improper usage, private modification and other faults.

## Attention

This part has strong power. High speed running propellers have certain safety risk. User must be older than 18 years and have relative professional knowledge. Before flight, please carefully check if all components are in good condition, the propeller and motor are installed correctly, and the screws are not loose.

## Features

- Support dual throttle (CAN digital throttle +PWM analog throttle) control, priority CAN digital throttle control.
- Quick response: It takes only 0.6 seconds for the motor to go from idle to full speed.
- Equipped with a CAN communication interface, enabling real-time communication with the flight controller. (Note: This function requires matching with the flight controller.)
- Both the control signal interfaces and the main power supply are fully isolated.

## Protection Function

### Short Circuit Protection

When the ESC detects a short circuit, it will cut off the output immediately and auto-restart after 150ms.

### Stalling Protection

Stalling Protection: The ESC will resume output only after the throttle is reset to zero and the ESC is powered on again.

### Voltage Protection

Voltage Protection: Once the battery voltage is detected to be less than 158V or higher than 427V when the ESC is powered on, the ESC will sound an alarm and will not start the motor.


### Temperature Protection

Temperature Protection: During flight, if the ESC temperature exceeds 125°C, it will start reducing the maximum output power by 50%. If the temperature continues to rise above 140°C, the ESC will turn off the output, and normal output can only be restored after the throttle is reset to zero. When the temperature drops to 80°C, the ESC's maximum output power starts to increase.

### Throttle Loss Protection

Throttle Loss Protection: When the ESC detects that the throttle signal is lost for more than 2.0 seconds, it will immediately shut off the power output. After the throttle signal is restored, the ESC will resume the previous power output.

## ESC Connection

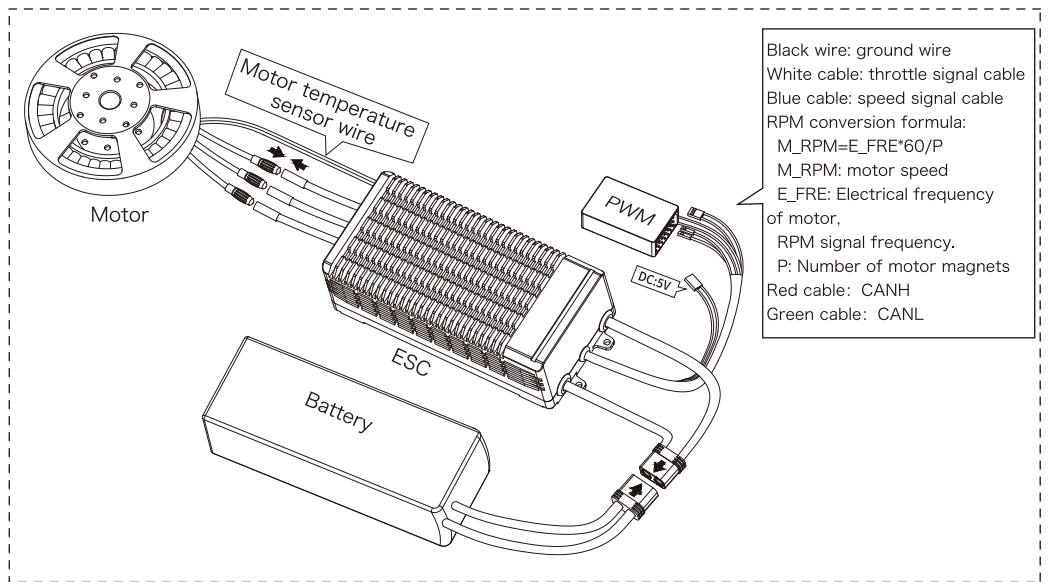

## ESC Parameter

- |   |                                       |
|---|---------------------------------------|
| Model: UF80F v2   | Battery Cell Count: 48-96S            |
| PWM Input Signal Voltage: 3.3V/5V(compatible)           | Compatible Signal Frequency: 50-500Hz |
| Continuous Current: 80A (under good cooling conditions) | BEC: 5V/200MA output                  |
| Current limiting: 80A                                   | IP Rating: IPX4                       |
| Online Update: available                                | Weight(without lines): ≈880g          |
| Throttle Loss Protection: available                     | Motor Line: 10AWG                     |
| Phase Short Circuit Protection: available               | Power Line: 10AWG                     |
| Voltage Protection: available                           | Size(L*W*H): 186.5*84.2*56.7mm        |
| Temperature Protection: available                       | Communication interface: CAN          |
| Motor Temperature Detection: available                  |                                       |
| Stall Protection: available                             |                                       |
| Working Environmental Temperature: -20-65 °C            |                                       |
| Throttle Pulse Width: Default 1050us - 1940us           |                                       |

## Trouble Shooting

| Problem  | Alarm  | Cause                                   | Solution  |
|--|--|---|---|
| Motor can't start after powering on                          | Quick noise of beep beep beep...                           | Throttle is not made zero               | Adjust throttle to bottom   |
| Motor can't start after powering on                          | Beep, beep, beep... every 1 second                         | Receiver has not throttle output signal | Check sender and receiver co-work condition, check throttle control lines |
| Voltage is less than 158V                                    | Beep-Beep, Beep-Beep... every 1 second                     | Battery voltage is too low              | Change full power battery   |
| Voltage is more than 427V                                    | Beep-Beep, Beep-Beep... every 1 second                     | Battery voltage is too high             | Change proper full power battery  |
| Temperature is higher than 80°C                              | Beep-Beep-Beep, Beep-Beep-Beep... every 1 second           | ESC's temperature is too high           | Please cool down the ESC in a ventilated place                            |
| The power-on current or short-circuit protection is abnormal | Beep-Beep-Beep-Beep, Beep-Beep-Beep-Beep... every 1 second | Overload                                | Replace the appropriate propeller blades                                  |